


ASSEMBLY INSTRUCTION

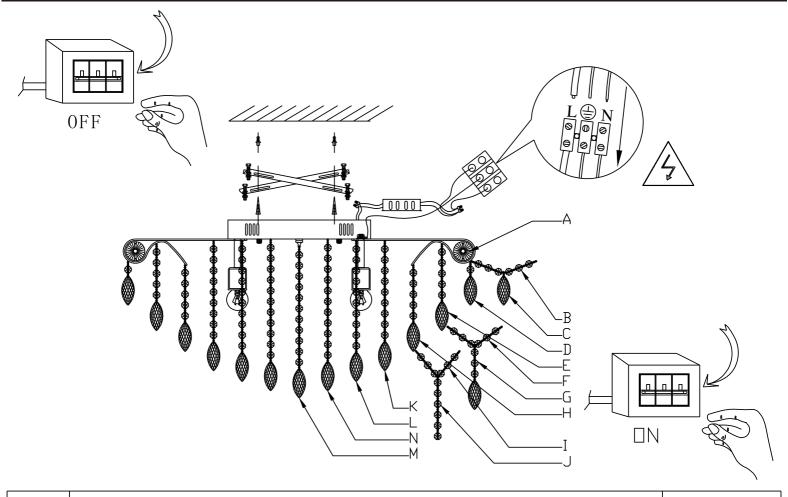

ИНСТРУКЦИЯ A1660PL-8AB



Mode	Accessories View	Quantity
Α		16
В		16
С		16
D	***	16
E		16
F		16
G		16
Н		16
I		16
J	⊗ ⊗ ⊗ ⊗ ⊗	16
K		16
L		12
N		6
М		1